





## INSTALLATION INSTRUCTIONS


1. Remove shower head from neck by loosening connection with pliers turning head and connection in a counter clockwise direction,( facing shower head)

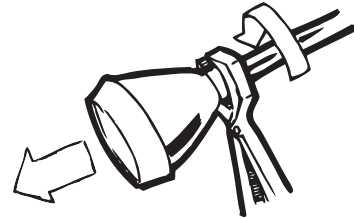


2. If you have a shower wand with hose, loosen collar with pliers and then turn counter clockwise until off.

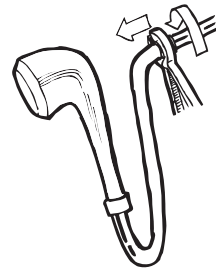

3. With head or wand now off, clean neck threads with wire brush to remove any old teflon tape or sealing compound. Now wrap clean neck threads with new teflon tape. Apply tape in a clockwise rotation. Two or three rotations with new tape will be enough.

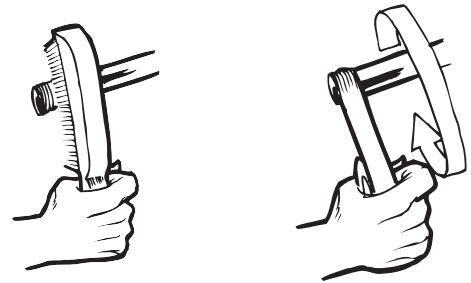

4. Install female end of TUBO on shower neck with new teflon tape.

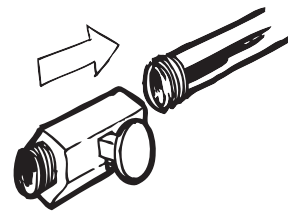

5. Use only your hand to tighten the valve onto the shower neck, stopping with the valve wheel on the right when enough tension has been met.

